



ANALITE NEP9000 AND NEP9500 SERIES TURBIDITY PROBE USER MANUAL

V2.3 © 2013



ABN 56 007 283 963

8 - 10 Keith Campbell Court, PO Box 9039 Scoresby, VIC 3179 AUSTRALIA

Tel: +61 3 8706 5000; Fax: +61 3 8706 5049

Email: info.au@observator.com Web: www.observator.com





ANALITE NEP9000 and NEP9500 Series Turbidity Probe User Manual

Introduction

Thank you for purchasing an ANALITE NEP9000 or NEP9500 series turbidity probe. It will give you years of service if you install and maintain it according to guidelines set out in this Manual.

The ANALITE NEP9000 and NEP9500 series of turbidity probes are an enhanced version of our successful ANALITE 190 and 195 series probes. They offer better performance, more output options and greater ease of deployment and are available in the same mechanical package.

The ANALITE NEP9000 and NEP9500 series turbidity probes are designed for monitoring and process applications where turbidity levels of up to 3,000NTU may be encountered. Standard ranges are 100NTU, 400NTU and 1,000NTU, but custom ranges are available up to 3,000NTU.

Specifically, the ANALITE NEP9000 probes are designed for applications that will not allow bio-fouling to build up such as short monitoring deployment or placement in fast and cold running water. The ANALITE NEP9500 probes however, with their integral wiper assembly, are designed where bio-fouling or sedimentation buildup is likely. The ANALITE NEP9000 and NEP9500 series of probes may be submerged to a depth of 100 meters (approx. 330 feet).

The ANALITE NEP9000 and NEP9500 probes use 90° optics and employs infrared light in accordance with ISO7027. All probes use a unique modulation technique that ensures almost total rejection of ambient light conditions as well as a unique microprocessor controlled differential sample and hold circuit for enhanced performance particularly at low turbidity levels.

Applications

The applications that the ANALITE NEP9000 and NEP9500 probes are so extensive and too numerous to elaborate on in this document but generally they include:

- 1) Monitoring of streams and rivers.
- 2) Monitoring of water storage bodies including stratification studies.
- 3) Intermediate and final effluent treatment monitoring.
- 4) Hydrological run off studies.
- 5) Ground and bore water analysis.
- 6) Drinking water filtration efficiency.
- 7) Industrial process monitoring.
- 8) Sludge and dredge monitoring.
- 9) Sediment load monitoring.

Which model is best used is dependent on the application, the measuring environment, the logging equipment and the monitoring period (deployment times) required.

The ANALITE turbidity probes are not suitable in situations where they may be abraded by large particles such as sand and under these circumstances the reading may become erratic due to the large particles passing the optic sensor. Measuring turbidity under these circumstances will require a stilling well to allow the sand particles to settle away from the optic sensor in the probe tip.

Page 3 V2.3 © 2013

Specifications

Parameter	NEP9001/9501	NEP9004/9504	NEP9010/9510	NEP90xx/95xx	
Measurement					
Technique	ISO7027 - 90°				
Range	100NTU	400NTU	1,000NTU	Custom to 3,000NTU max.	
Output Span	±2.5Volts or 4 – 20mA, where -2.5V or 4mA = 0NTU 0 to +1V and 0 to +2.5V outputs are also available. Specify output at time of order.				
Response Time	Approx 1 second to	99%.			
Linearity	1%	1%	3%	5% (3,000NTU)	
Zero Offset, 0 to 40°C	±3mV max.				
Repeatability @ 25°C	±1%	±1%	±2%	±2%	
Temperature Coefficient (0 to 40°C)	< ±0.05%/°C	_		_	
Calibration compliance using APS AEPA polymer solutions	3 points 0, 40 and 100NTU	3 points 0, 100 and 400NTU	4 points 0, 100, 400, and 1000NTU	3 points min. 0 and 2+ other values.	
Physical (Standard Ve	rsion – see Physical D	imensions)			
Probe Diameter	32mm.	·			
Probe only Length	181mm without wiper, 188mm with wiper.				
Overall Length	267mm without wiper; 274mm with wiper				
Weight (probe only)	120gms without wipe	er, 190gms with wiper.			
Cable	Multi-core + shield. 6.5mm dia. nominal. PUR sheathed.				
Connector	7 pin male waterproof to 100m when mated. Open face pressure of 50m				
Cable Length	Specify at time of order. Cable part number is NEP-CBL.				
Environmental					
Static Depth Rating	100m (stainless steel casing), 30m (composite casing)				
Operating Temp.	-5°C to +40°C				
Storage Temp.	-20°C to +50°C				
Wiper					
Wiper Arrangement NEP9500 series only	Disposable and consumable - silicon wiper on PVC or Acetal arm. Field replaceable. Mounted on central shaft, fixed by hex set screw onto flat of wiper shaft.				
Actuation NEP9500 series only	By external TTL/CMOS active low pulse or momentarily contacting the wiper actuation conductor (pin 5) to 0V (pin 3). Automatic wipe every 2 hours if the wiper actuation conductor (pin 5) is permanently connected to 0V (pin 3) and also when applying normal power to the probe.				
Actuation Pulse Duration	On NEP9500 series only. >50mSec, <500mSec				
Actuation Pulse Current Sink	On NEP9500 series only. 1mA max.				
Wiping Time	On NEP9500 series only. 8 second nominal. During the wipe the output is held to the output value just prior to the wipe ±1%.				
Power					
Operating Voltage	9.6 - 28V dc				
Current Consumption	15mA maximum when not wiping plus up to 20mA if current output fitted.				
Power Settling Time	< 1 Sec				
Wiping Current	NEP9500 series on	ly. Additional 25mA ar	prox at less than 30m	submersion.	

Accessories				
NEP19WIPE	Wiper Kit comprises 4 replacement wipers and hex fastening key for the ANALITE NEP9500 series only. Also used on the ANALITE NEP195, 395 & 495 probes.			
NEP390-CA-xx	Shielded multi-core cable assembly including mating connector to suit the standard version. Length xx to be specified at time of probe order.			
NEP19SHRD	Stainless protective shroud to suit the NEP9000 and NEP9500 series.			
NEP-CBL-xx	Cable only xx meters - specify at time of order. Required for G version.			

Installation

There are two aspects to consider when preparing to install the ANALITE NEP9000 or NEP9500 series probes in the field

- 1) Installation of the probe proper into the environment where measurements are to take place.
- 2) Cabling considerations.
- 3) Connection of the probe into the data collection and control system.

Probe Installation

The probe is normally installed with the optics pointing downwards (but not vertical) or in a horizontal alignment. In a simple application the probe is simply immersed into the water to the desired depth, but within the depth rating of the probe. Please note the depth rating is based on static water. Allowances must be made for the effect of flowing water to ensure the static depth rating is not exceeded. If the probe is to be installed downwards then it is recommended to install it a few degrees away from the vertical to allow bubbles to escape away from the optic face.

Probes with integrated wiping should be installed such that they can be easily retreived from time to time to replace the wiper arm assembly.

It is important that the optic end of the probe is kept clear of obstruction such as the river bed. The minimum distance between the optic head and any object should be 50mm (2").

The casing of the ANALITE NEP9000 and NEP9500 series probes are made of 316 stainless steel (S) or a composite material (P) but the optic face is made of plastic materials and so should be protected from accidental scratching or abrasion. The wiper arm assembly should be replaced periodically to avoid abrasive material build-up in the wiper that may eventually abrade the optic face.

To avoid crevice corrosion if using the 316 stainless steel casing version (S) in salt and acidic water deployments it is strongly recommended that the probe be thoroughly washed in clean water after deployment and prior to storage. Failure due to crevice corrosion is not covered under warranty. A composite cased version (P) is available for corrosive and sea water environments.

If the probe body is to be installed in a glanded fitting (for insertion into a pipe etc.) then care must be taken to ensure the sealing surface pressures offered by the gland fitting are not excessive so as to not cause distortion of the probe casing and force leakage. The ANALITE NEP9000 and NEP9500 series probes are thin wall instrument and so glanding pressure must be minimal and spread over the largest possible area. Do not cut or damage the outer sheath of the cable. Water may enter the probe through holes or cuts in the cable sheath.

Where damage may occur due to river rocks striking or rolling over the probe body, a protective shroud should be used which can be made of simple PVC piping or stainless steel which ever the situation warrants. A shroud is available for the NEP9000 and NEP9500 as an accessory under the part number NEP19SHRD. Such a shroud not only protects the probe but also assist in maintaining a minimum distance between probe optics and any local obstructions.

Cabling Considerations

Physical

Cable normally supplied with the ANALITE NEP9000 and NEP9500 series probes is a specially selected PUR sheathed and screened cable selected for strength, chemical resilience and exceptional resistance to cuts, nicks and abrasion. The cable part number is NEP-CBL.

Never the less, care should be taken during the installation process of the probe and its cabling to ensure that the cable is not subjected to persistent pulling, snagging, abrasion or severe compression. This is particularly important for the probes with fixed and glanded cable as any water penetration through the cable sheath may find its way into the probe proper affecting the accuracy of the readings and possibly causing irreparable damage.

For probes fitted with connectors care must be taken to ensure the connectors are properly mated to ensure a seal yet not screwed together too tightly so as to make their disconnection difficult after a long deployment. Prior to mating make sure both the probe and cable connectors are dry in the termination area otherwise erratic operation may occur due to moisture.

Electrical


Because long cable lengths are common some electrical factors should be taken into account and these are discussed below.

Voltage Output Version

ANALITE NEP9000 and NEP9500 probes may have an analogue voltage output with a nominal output impedance of 100 ohms. Conductor resistance is nominally 73 ohms/km or 7.3 ohms for 100 meter probe cable and this may need to be taken into account in some configurations particularly with regards to logger channels that have low input impedance (say less than 10,000 ohms). For particularly long cable runs, the 4-20mA current output version is recommended.

4 - 20mA Current Output Version

ANALITE NEP9000 and NEP9500 probes may have an analogue 4-20mA current output with a maximum load rating of 350ohms, consequently cable loop resistance should be taken into account. The PUR cable normally supplied with the probes has a nominal loop resistance of 14.6 ohms per 100m. A schematic of the probe and its load is shown below.

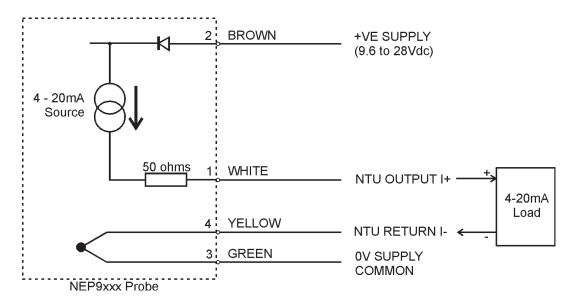

For very long cable runs (>200m), it may be advisable to connect the the NTU Return conductor to the Supply Common conductor at the end of the cable to reduce the voltage drop along the run.

Surge and Lightning Considerations

Surge and lightning protection may also have to be considered given that many installations are "in the wild". It is important to note that the NEP9000 and NEP9500 series probes have the stainless steel casing terminated only to the cable shield. There is no electrical contact between the casing and the probe electronics. The signal ground (4) and power ground (3) are electrically bound together within the probe.

Probe Connection


The connector version (M) of the NEP9000 and NEP9500 probes are fitted with a 7 pin male marine connector with an open face pressure rating of 50m. This means that if the probe is accidentally submerged when not connected, or improperly connected to its mating cable assembly, a pressure rating of only 50m is offered. The mating female cable connector is supplied with the specified cable length. When the cable connector is properly mated to the probe the overall pressure rating is 100m.

A fixed and glanded cable version is also available and these versions have the G suffix attached to the part number.

The cable conductor assignment is as shown below:

Note that the Signal Common (yellow) and Supply Common (green) conductors are electrically connected together within the probe. The stainless steel cover is connected only to the cable shield.

The probe is designed to operate with most data loggers, PLC and DAS systems available today. When using the NEP9500 models some form of wiper actuation control may be required depending on the wiping protocol selected. This is discuss later in this manual.

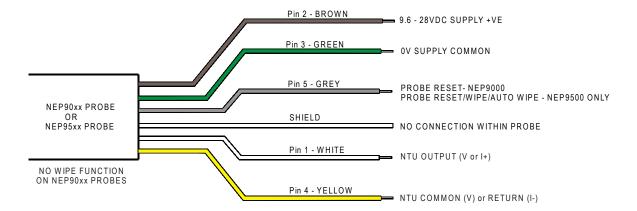


There are two wiping protocols available on the NEP9500 probes:

- 1. A single wipe externally initiated by momentarily reseting the probe.
- 2. An automatic wipe every two hours by terminating the Reset/Wipe to the Power Common...
- 1. The wiper on the NEP9500 probes can be actuated by momentarily connecting the Reset/Wipe conductor (5) to the Power Common conductor (3) for longer than 50msec but less than 0.5 second. This has the effect of resetting the probe which then initiates a wipe immediately after the inbuilt microprocessor has properly reset. This protocol can be implemented using a mechanical switch arrangement or open collector (drain) output available on most loggers. For multiple wipes each consecutive wipe must be actuated after the wiper has parked in its rest position (approx. 8 seconds after a wipe actuation). Reset/Wipe pulses applied during a wipe action will be ignored. Note that during the wipe period the NTU output will be held at the value measured just prior to the wipe (within 1%).

The recommended external wiper activation interface arrangements are shown schematically below.

2. Permenately connecting the Reset/Wipe conductor (5) to the Power Common (3) will force an automatic wipe every two hours and when the probe power is applied. Note that during the wipe period the NTU output will be held at the value measured just prior to the wipe (within 1%). Output from the probe during the initial wipe on a power up should be disregarded and data treated as valid, say, about 12 seconds after the power is applied.


The termination arrangement for the 2 hourly auto-wipe is shown schematically below.

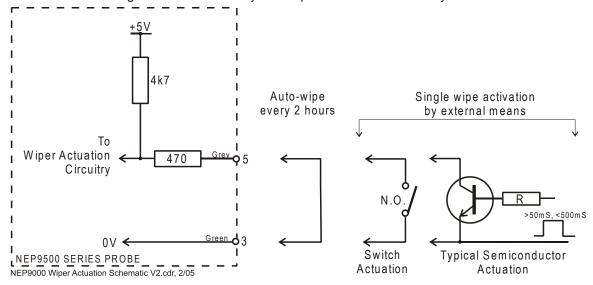

Current Output Arrangement

When a NEP9000 or NEP9500 series probe is ordered with the 4-20mA current output, the probe is configured as a (high) current source. The load must be less than 350 ohms to ensure proper operation over the probe's specified power supply range. The connection arrangment for a probe with a current output is shown below.

Page 7 V2.3 © 2013

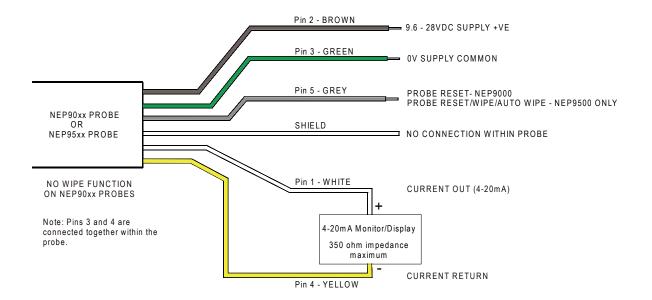

Connection to the ANALITE TM5



The NEP9000 and NEP9500 series are readiliy interfacable to the ANALITE TM5 Indicator/Controller unit the probe output must be either ±2.5V or 4-20mA. The ANALITE TM5 is ideal for industrial control and alarm applications. The ANALITE TM5 allows for the selection of wiping intervals as well as allowing field calibration.

Normal termination of a NEP9000 or NEP9500 series probe with $\pm 2.5 \text{V}$ output to an ANALITE TM5 is as tabled below:

ANALITE NEP9xxx Probe		ANALITE TM5	
Pin	Colour	Term No.	Circuit
1	White	46	NTU Vout Signal
2	Brown	44	+12Vdc Power
3	Green	43	Power Common
4	Yellow	45	NTU Vout Common
5	Grey	47	Clean (Wipe) – NEP95xx only

If the TM5 is fitted with the 4-20mA input option, a NEP9000 or NEP9500 series probe with current output may be terminated as tabled below:


ANALITE NEP9xxx Probe		ANALITE TM5 with 4-20mA option	
Pin	Colour	Term No.	Circuit
1	White	50	NTU I+ Signal
2	Brown	44	+12Vdc Power
3	Green	43	Power Common
4	Yellow	51	NTU I- Signal
5	Grey	47	Clean (Wipe) – NEP95xx only

Wiper Replacement

This applies to the NEP9500 versions only.

The effectiveness of the wiper in maintaining a clean optical surface will eventually be compromised, the rate being dependent on the water under investigation and the number of wiping cycles carried out. We recommend periodic inspection of the wiper's silicon pad to determine if the wiper material is deteriorating or if there is an excessive build up of material from bio-fouling. In addition, as a precaution, we recommend changing the wiper prior to each long term deployment. The wiper is a consumable item. Wiper kits are available from Observator Instruments or their distributors (Part No. NEPSILWIPE).

To change the wiper, loosen the set screw on the old wiper with the 1.5mm hex key provided until the wiper can be removed from the shaft. Place a new wiper on the shaft in the same position as the wiper just removed so that the set screw in the new wiper faces the flat on the probe's wiper shaft. Very gently press the silicon rubber pad of the wiper against the face of the probe and then tighten the set screw. It is crucial that the wiper arm body does not make contact with the probe face – only the silicon pad should be in contact. A gap of 1.6mm between the wiper arm body and the probe face is typical when a new wiper has been properly installed.

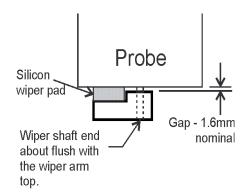

NOTE: It is imperrative that the set screw be fastened squarely aligned onto the flat on the shaft otherwise proper operation will be affected.

CAUTION: Do not over tighten the set screw or manually attempt to rotate the wiper arm once set onto the shaft. Any attempt to manually rotate the wiper may cause gearbox damage and void the warranty.

Calibration Confirmation and Turbidity Standards

The ANALITE NEP9000 and NEP9500 probes are factory calibrated using non-toxic neutral-density polymer-based turbidity standards. Solution values up to 1,000NTU as USA EPA certified.

10NTU, 40NTU, 400NTU and 1,000NTU neutral-density polymer-based turbidity standards are available from Observator Instruments and their distributors, or directly from the manufacturer for US customers only. We recommend the use of one of these standards and pure water for a calibration confirmation. The standards should not be diluted, as this will reduce the effect of the anti-fungal agent contained in the standard solutions.

Because a turbidity probe is inherently an optical device, care must be taken during a calibration confirmation to



ensure that external optical effects are kept to a minimum. This is best implemented by placing calibration solutions in dark, leak proof bottles with a non-reflective finish such as Nalgene® 2106 bottles in amber. These are available from Observator Instruments with wide necks and a nominal capacity of 1,000ml and carry the part number NEP-BTL. The calibration routine is best done under natural or incandescent lighting (not fluorescent or arc).

Another critical factor is cleanliness. Any debris or water that makes its way into the calibration solutions will affect its value. It is therefore a good practice to have an ample supply of distilled de-ionized water and a means of properly drying the probe end (clean compressed air is ideal). Wipers should **always** be removed prior to a calibration routine. Probes should be flushed in two containers of distilled water with

thorough drying in between and before insertion into a calibration solution. Also where ever possible, a calibration confirmation should commence at a lower value (usually zero) and work up in value to further minimize the effects of cross contamination.


CAUTION: ALWAYS REMOVE THE WIPER PRIOR TO CALIBRATION.

When inserting the NEP9000 or NEP9500 probe into a calibration solution ensure that the optic face of the probe is at least 50mm from the base and all sides of the bottle. This is particularly important for low turbidity solutions below 200NTU. Hold the probe a few degrees from the vertical and gently tap it on the bottle rim so as to dislodge any air bubble on the optic face. If the probe is properly placed the measurement value will not vary if the probe is gently moved a few millimeters in any direction.


Page 9 V2.3 © 2013

Physical Dimensions

NEP9000 and NEP9500 Probes

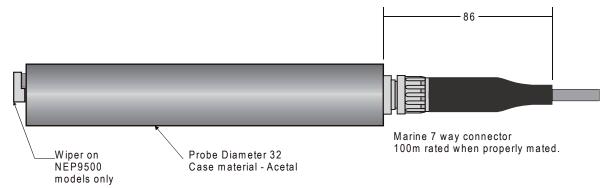

M VERSION - MARINE GRADE CONNECTOR

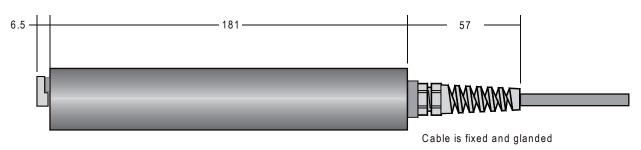

G VERSION - FIXED GLANDED CABLE

All dimensions in mm.

G version is standard configuration.

M version at additional cost.

Warranty

The ANALITE NEP9000 and NEP9500 series turbidity probes are warranted against defects in material and workmanship for one year from date of purchase, exclusive of the wiper assembly. The warranty does not cover the wiper arm assembly, corrosion or leakage due to corrosion. Unauthorized service, tampering or abuse will void this warranty. Damage as a result of improper installation will also void this warranty.

Should you require service (under warranty or otherwise) please contact the Observator Instrument distributor from whom you purchased the probe, or our Service Centre. If the probe is being returned for service under warranty please supply proof of purchase.

All support enquiries must include the serial number of the probe – labelled on the casing of the probe.

The probe must be decontaminated and cleaned and declared as such otherwise a cleaning fee may apply.

The shipping address for probe returns is:

Observator Instruments' Service Centre 8 Keith Campbell Court Scoresby, VIC 3170 AUSTRALIA.

Tel: (+61-3) 8706 5000, Fax: (+61-3) 8706 5049

EC Declaration of Conformity according to Council Directive 89/336/EEC

We, McVan Instruments Pty Ltd, declare under our sole responsibility that the product:

Analite NEP9000 and NEP9500 SERIES of turbidity probes and accessories,

Manufactured by:

McVan Instruments Pty Ltd

To which this declaration relates, are in conformity with the protection requirements of Council Directives 89/336/EEC on the approximation of the laws relating to electromagnetic compatibly.

This Declaration of Conformity is based upon compliance of the product with the following harmonised standards:

Emissions: EN50081-1:1992 Immunity: EN50082-1:1997

Signed by:



John Van de Vreede - Director

Date of Issue: 1 DECEMBER 2002

Place of Issue: McVan Instruments Pty Ltd

58 Geddes Street, Mulgrave

VIC 3170 Australia





ABN 56 007 283 963


8 - 10 Keith Campbell Court, PO Box 9039

Scoresby, VIC 3179 AUSTRALIA

Tel: +61 3 8706 5000; Fax: +61 3 8706 5049

Email: info.au@observator.com Web: www.observator.com

Protection Shroud

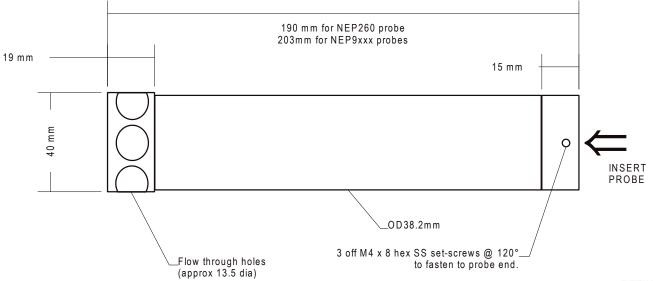


FITTING

Insert the Analite turbidity probe into the shroud as shown.
Ensure end of probe is against internal stop at other end of shroud.
Rotate the probe in the shroud so as to give the lowest possible (NTU) output when in clear water.
Fasten the M4 screws onto the probe end. (Do not over tighten).
Re-zero the instrument with the shroud fitted.
Approximate weight of the shroud alone is 400grams

Material: 316 Stainless Steel
© 1999 - 2005 Observator Instruments Pty Ltd
File: NEP SHROUD for NEP160 and NEP9xxx.cdr

Product Identification Nomenclature

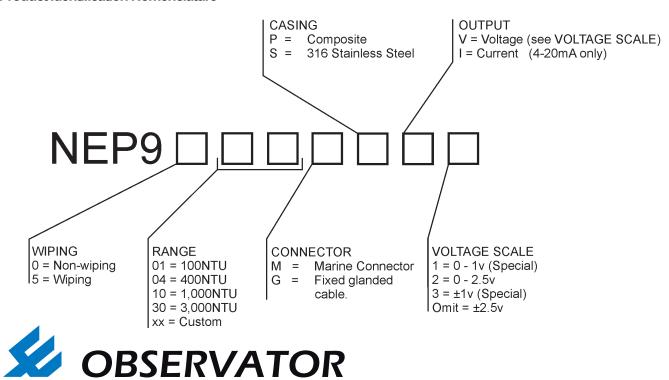

instruments

ABN 56 007 283 963

8 - 10 Keith Campbell Court, PO Box 9039

Scoresby, VIC 3179 AUSTRALIA

Tel: +61 3 8706 5000; Fax: +61 3 8706 5049

Email: info.au@observator.com Web: www.observator.com

NEP9000 Manual V2_3.pdf